

The Samsung logo, consisting of the word "SAMSUNG" in white, uppercase letters inside a black, horizontally-oriented oval.

Wireless Audio Portable

user manual

Thank you for purchasing this Samsung product. To receive more complete service, please register your product at

www.samsung.com/register

DA-F60/DA-F61


Note that the product has been fully charged when shipped, but the internal battery may self-**discharge** if not used for a long period of time. If fully discharged, **the product may not immediately operate even when the power adaptor is connected. In such a case, wait for charging at least 20 minutes** before using. It is recommended to fully charge the product, charge it for more than 3 hours to see the battery indicator turns green (enough) or LED off (full).

CONTENTS

- 2 What's included
- 3 Your Wireless Audio Portable
- 4 Checking and Charging the battery
- 5 Using the NFC function
- 6 Using Bluetooth function
- 7 Using AUX IN function
- 7 Using the SoundShare function
- 8 Specifications
- 8 Software upgrade
- 9 Troubleshooting
- 10 Safety Warnings
- 10 Safety Precautions

WHAT'S INCLUDED


Check for the supplied accessories shown below. The appearance of the accessories may differ slightly from the illustrations.

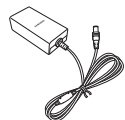


Power Adapter



Audio Cable

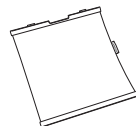


Cover Fabric




User Manual

Using the Cover Fabric

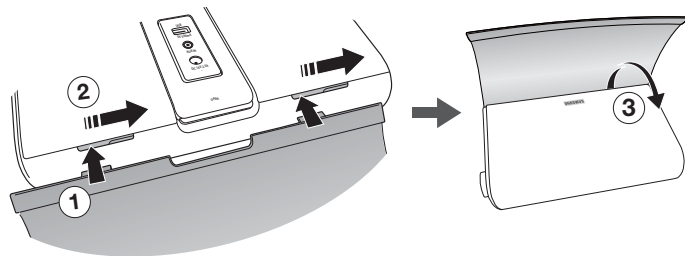

Wrap the cover around the product. The cover will be held in place by magnets.

YOUR WIRELESS AUDIO PORTABLE

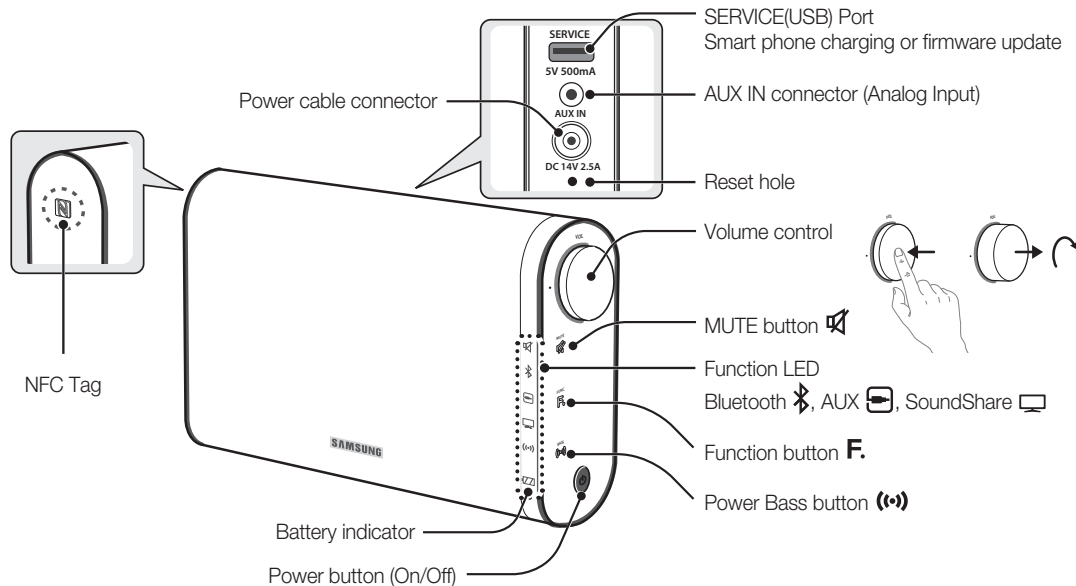

- ⚠ When you charge smart phone via USB, the battery may discharge more quickly.
- Charging a smart phone through the Service (USB) port takes longer than charging the unit using the adapter. It is only chargeable when this product is turned on.

CHECKING AND CHARGING THE BATTERY

You can play this product for 12 hours continuously on one charge. For a full charge, we recommend you charge the battery for about 3 hours.

Checking the battery

The battery status indicator is normally off to conserve battery power. To check the charge level, press and hold the Power button for 5 seconds.




Green 60% or more of full charge

Yellow 30% to 60% of full charge

Red 30% or less

Red blink Charge needed

Charge the battery

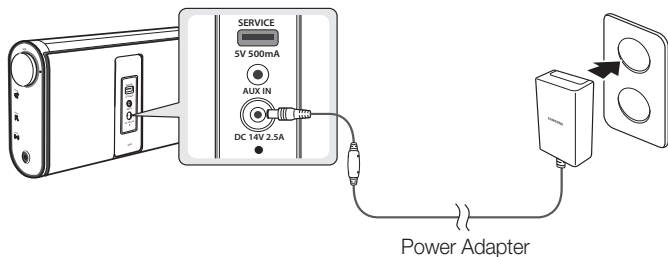

OFF Full charge


Green 60% to 99% of full charge

Yellow 30% to 60% of full charge

Red 30% or less


- ⌚ Charge and store the battery at 5° C ~ 35° C.
- ⌚ Do not charge the battery for more than 12 hours or leave the battery fully discharged for a long time. Doing so may shorten the battery life.
- ⌚ Depending on how you use your player, actual battery life may vary and may be shorter than specified.
- ⌚ If the battery has insufficient charges, pressing the power button does not turn on the product. Instead, the battery indicator blinks red a few times and turns off.
- ⌚ While the battery indicator is blinking, all other buttons will not work.
- ⌚ If the battery is fully discharged, all function, volume and bass settings are initialized.

Support

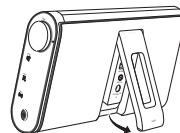

Don't pull the support too hard. You can damage it.


Reset your Product

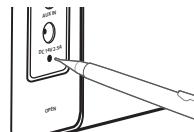

If an error occurs while you are operating this product and it doesn't work properly, press the Reset hole with a pen tip or similar item for 2 seconds.

USING THE NFC FUNCTION

Connect your NFC compatible device via Bluetooth to the Wireless Audio Portable using this simple set-up procedure. You can play music from the smart phone through the Wireless Audio Portable.

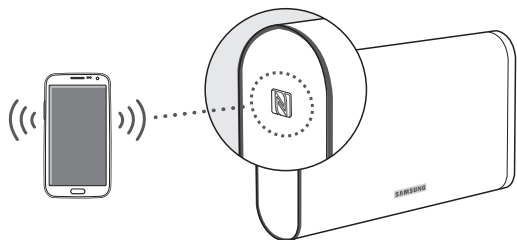


1. Turn on the NFC function on the smart phone and make sure the screen lock function on the smart phone is off. The smart phone's NFC function will not work if screen lock is on.
2. Gently touch the NFC logo [N] on the left of the Wireless Audio Portable with the NFC supported device.
 - If the Wireless Audio Portable is off, it will turn on automatically.
3. A pop-up asking whether to proceed with the Bluetooth connection appears on the smart phone. Select <Yes>.
 - When the connection is complete, the 'connected' message appears.
4. To disconnect the NFC device, touch the device to the Wireless Audio Portable's left panel again.
 - To connect another NFC device while the first smart phone is still connected, touch that device to the Wireless Audio Portable's left panel. The Wireless Audio Portable will disconnect the first smart phone and connect to the second smart phone.

- ☞ The NFC function is built into Android devices running Android OS 4.1 Jellybean or later.
 - If your device is running an Android OS earlier than Android OS 4.1 Jellybean, you must download the 'Samsung NFC Connection' application from Android market to use the NFC function.
- ☞ The position of the NFC antenna differs on smart phones. Check where the NFC antenna is located before connecting.
- ☞ If your smart phone is covered with a thick case, the connection may not succeed.
- ☞ The N-mark is a trademark or registered trademark of NFC Forum, Inc. in the United States and in other countries.
- ☞ NFC tagging for Bluetooth connection cannot be established while powering on and off.
- ☞ NFC tagging for Bluetooth connection will not work while the battery indicator is blinking.

USING BLUETOOTH FUNCTION

You can connect the Wireless Audio Portable to Bluetooth devices and enjoy music with high quality stereo sound, all without wires!

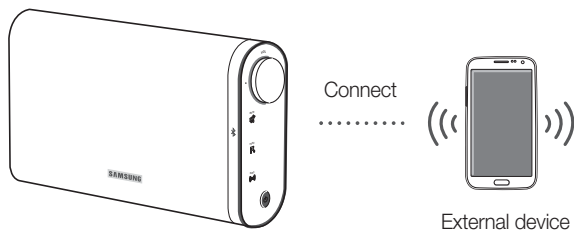

1. Press the **Bluetooth** button on the Wireless Audio Portable to select the Bluetooth function.
2. Press the **Bluetooth** button for 3 seconds in Bluetooth mode.
3. The Bluetooth indicator blinks quickly and the product changes to the pairing mode.
4. Scan or Search for the Wireless Audio Portable on your Bluetooth device.
5. Select **"[Samsung] W_Audio"** on the list of items found by the Bluetooth device.
 - If the Bluetooth device fails to pair with the Wireless Audio Portable, repeat Steps 2, 3, and 4.
6. Play music on the connected device.


- ⚠ A Bluetooth device may cause noise or malfunction, depending on usage, when:
- A part of your body is in contact with the receiving/transmitting system of the Bluetooth device or the Wireless Audio Portable.


6 English

- It is subject to electrical variation from obstructions caused by a wall, corner or by office partitioning.
 - It is exposed to electrical interference from same frequency-band devices including medical equipment, microwave ovens, and wireless LANs.
- ⚠ The further the distance between the Wireless Audio Portable and Bluetooth device, the worse the quality.
- ⚠ The Bluetooth connection only works when the Bluetooth device is close to the set. The connection is automatically cut off if the Bluetooth device moves out of range. Even within range, the sound quality may be degraded by obstacles such as walls or doors.
- In Bluetooth connection mode, the Bluetooth connection will be lost if the distance between the Wireless Audio Portable and the Bluetooth device exceeds 5m.
- ⚠ This wireless device may cause electric interference during its operation.
- ⚠ You may be required to enter a PIN code (password) when connecting the Bluetooth device to the Wireless Audio Portable. If the PIN code input window appears, enter <0000>.
- ⚠ Supported sampling frequencies for aptX and SBC decoding are 44.1kHz and 48kHz.
- ⚠ The AVRCP feature is not supported. You cannot connect to a Bluetooth device that supports only the HF (Hands Free) function.
- ⚠ Connect only to a Bluetooth device that supports the A2DP (AV) function.
- ⚠ Only one Bluetooth device can be paired at a time.
- ⚠ When switching to Bluetooth mode or powered up in Bluetooth mode, the last Bluetooth connection will be restored automatically if available. Automatic Bluetooth connection attempt will abort after 1 minute.
- ⚠ Within the automatic connection trial, connection to another Bluetooth device can be limited. To connect to a different Bluetooth device, switch the product's Bluetooth mode to pairing mode.

USING AUX IN FUNCTION

To enjoy music from an external audio device that does not support Bluetooth communication, use AUX IN of the product.

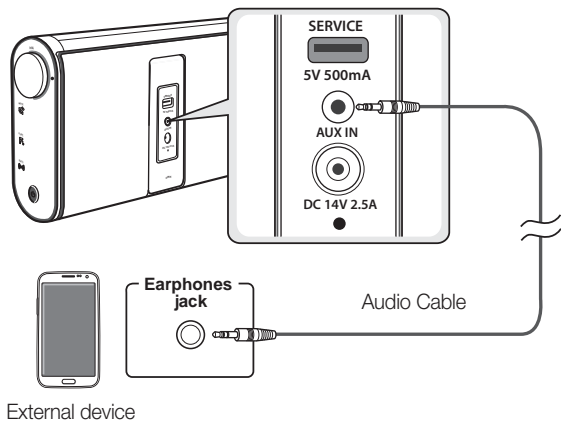








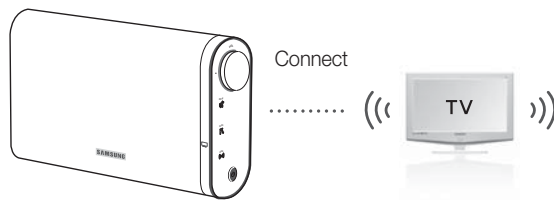

1. Connect the audio cable to the AUX IN terminal.
2. Press the  button to select the AUX function.

 Before moving or installing this product, be sure to turn off the power and disconnect the power cord.

USING THE SOUNDSHARE FUNCTION

Connect the Wireless Audio Portable to a Samsung TV that is compatible with Bluetooth to enjoy TV sound wirelessly.



1. Turn on the Samsung TV and Wireless Audio Portable.
 - Set 'Add New Device' to 'On' in the TV's 'SoundShare Settings' menu. (Refer to the TV's user manual for details.)
 2. Press the  button to change the mode of the Wireless Audio Portable to . A message asking whether to proceed with Bluetooth pairing appears.
 - The  blinks in the standby mode.
 3. Select <Yes> on the TV screen. The Wireless Audio Portable pairs with the TV.
 - The  indicator blinks, and then stops blinking.
 - The Wireless Audio Portable Bluetooth pairing is complete.
 - If you want to cancel an existing pairing and pair the Wireless Audio Portable to another TV, press the  button for 3 seconds with the unit in  mode.
-  SoundShare is supported by some Samsung TVs released after 2012. Check whether your TV supports SoundShare before you begin. (For more information, refer to the user's guide of your TV.)
-  The optimal pairing distance is 1m or less.

SPECIFICATIONS

Model name	DA-F60/DA-F61
Weight	1.1 kg
Dimensions (W x D x H)	225 x 46.5 x 131 mm
Operating temperature range	+5°C~+35°C
Operating humidity range	10 % to 75 %


- Samsung Electronics Co., Ltd reserves the right to change the specifications without notice.
- Weight and dimensions are approximate.
- For the Power Supply and Power Consumption, refer to the label attached to the product. Open the rear cover to check the label.






 **aptX®** : aptX enables high quality Bluetooth stereo audio that delivers wired audio quality wirelessly.

SOFTWARE UPGRADE

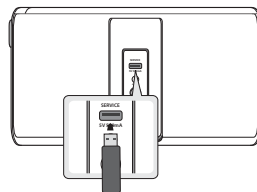Samsung may offer upgrades for the Wireless Audio Portable's system firmware in the future. To upgrade the firmware, visit samsung.com and find your model by name to locate the available download.

Download the firmware file onto a USB drive and follow the below instructions to upgrade the product.



1. Turn on the product.
 2. Insert a USB drive containing the firmware upgrade into the Service (USB) port on the back of the product.
 3. Press the  and  buttons for 5 seconds at the same time. The update process starts.
 - All LEDs indicators will blink during the update process.
 4. The LEDs will turn off automatically after the update process is complete.
 - Do not disconnect the power or remove the USB drive while upgrades are being applied.
 - The product will turn off automatically after completing the firmware upgrade.
 - When firmware is upgraded, settings you have made will return to their default (factory) settings. We recommend you write down your settings so that you can easily reset them after the upgrade.
 - When the battery indicator LED is red, do not update the product. Doing so could cause the product to malfunction.
-  If the firmware fails to upgrade, we recommend formatting the USB drive in FAT16 and trying again.
-  For upgrading purposes, do not format the USB drive in NTFS format because it is not a supported file system.
-  Depending on the manufacturer, the USB may not be supported.

TROUBLESHOOTING

Before requesting service, please try the following solutions:

The unit will not turn on.

- Connect the power plug to the outlet.
- Your player will not turn on if the battery is completely drained. Recharge the battery and turn the player on again.
- Check if the battery is discharged.

A function does not work when the button is pressed.

- Disconnect the power plug and connect it again.
- Check if the buttons correspond to the functions you want to activate.

Sound is not produced.

- Make sure the unit is properly connected.
- Check if the Mute function is on.
- Check if the volume is set to minimum.

The power of the unit is off.

- The unit automatically turns off in the following situations.
 - If there is no KEY input for 8 hours when the cable is connected in AUX mode.
 - If the AUX cable in AUX mode is disconnected for 25 minutes.
 - If the Bluetooth or SoundShare mode has been disconnected from this unit for 25 minutes.
 - It does not turn off when the smart phone is charging.

Sound is not produced in AUX mode.

- Check the power of the external device and whether the music is playing or not.
- Make sure the AUX mode is selected.
- Check if the audio cable is connected properly.
- Turn up the volume of the product/external device.

The SoundShare (TV pairing) failed.

- Check whether your TV supports SoundShare. (<http://www.samsung.com>)
- Check whether your TV has the latest firmware.
- Reset the unit.
- If the function doesn't work even though the connection is completed, contact the Samsung call centre.

The Wireless Audio Portable may not search or connect properly in the following cases.

- If there is a strong electrical field around the Wireless Audio Portable.
- If several Bluetooth devices are simultaneously paired to the Wireless Audio Portable.
- If the Bluetooth device is turned off, not in place, or malfunctioning.

SAFETY WARNINGS

CAUTION

RISK OF ELECTRIC SHOCK DO NOT OPEN

TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE THE COVER(OR BACK). NO USER SERVICEABLE PARTS ARE INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



This symbol indicates "dangerous voltage" inside the product that presents a risk of electric shock or personal injury.



This symbol indicates important instructions accompanying the product.

WARNING : To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.

CAUTION : TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.

- This apparatus shall always be connected to a AC outlet with a protective grounding connection.
- To disconnect the apparatus from the mains, the plug must be pulled out from the mains socket, therefore the mains plug shall be readily operable.

CAUTION

- Do not expose this apparatus to dripping or splashing. Do not put an object filled with liquid, such as a vase, on the apparatus.
- To turn this apparatus off completely, you must pull the power plug out of the wall socket. Consequently, the power plug must be easily and readily accessible at all times.

SAFETY PRECAUTIONS

Power Supply Precautions

- Do not overload outlets or extension cords.
 - This may result in abnormal heat or fire.
- Do not plug in or unplug the power cord with wet hands.
- Do not place the product near heating equipment.
- To clean the power plug blades, remove the plug from the wall outlet and wipe the blades with a dry cloth only.
- Do not bend the power cord or pull it forcefully.
- Do not put heavy objects on the AC power adaptor.
- Do not use the AC adaptor if it is damaged. Do not disconnect the AC adaptor by pulling on its power-cord.
- Do not plug the power cord into a loose or damaged outlet.
- Fully insert the AC adaptor's plug into the wall outlet so that it's plug is firmly attached to the outlet.
 - If the connection is unstable, there is a risk of fire.

Installation Precautions

- Do not install the product near equipment or objects that generate heat or produce fire (candles, mosquito coils, heaters, radiators, etc.). Do not install in direct sunlight.
- When moving the product, turn off the power and disconnect all cords (include the power cord) from the unit.
 - A damaged cord may cause a fire and poses a risk of electric shock.
- Installing the product in environments with high heat or humidity, dust, or extreme cold, can lead to quality problems or cause the product to malfunction. Before you install the product in an environment that is outside the norm, please contact the Samsung service centre for additional information.
- Place the product upright when installing it on a shelf, cabinet, or desk. Do not place the product on an unstable surface (e.g. a shaky shelf, a tilted desk, etc.).
 - Dropping the product can cause it to malfunction and poses a risk of injury. Severe vibration or impact can also cause the product to malfunction and lead to a fire hazard.

- Install your product with enough space around it for the ventilation.
 - Leave at least 10cm at the rear of the product and more than 5cm on each side of the product.
- Keep the plastic packing materials out of reach of your children.
 - Children playing with the plastic packing materials run the risk of suffocation.

Usage Precautions

- Using for an extended time at high volume may cause serious damage to your hearing.
 - If you are exposed to sound louder than 85db for an extended time, you may adversely affect your hearing. The louder the sound is, the more seriously damaged your hearing may become. Note that an ordinary conversation is between 50 to 60 db and road noise is approximately 80 db.
- This product contains dangerous high voltage. Do not attempt to disassemble, repair, or modify it yourself.
 - Contact a Samsung service centre when your product is in need of repair.
- Do not place any container that contains liquid on the product (e.g. vase, beverages, cosmetics, chemicals, etc.). Do not allow any metal objects (e.g. coins, hair clips, etc.) or flammable material (e.g. paper, matches, etc.) to enter the product (through the air vents, I/O ports, etc.).
 - If any harmful material or liquid enters the product, turn off the product immediately, unplug the power cord, and then contact a Samsung service centre.
- Do not drop the product. In case of a mechanical breakdown, disconnect the power cord and contact a Samsung service centre.
 - There is a risk of fire or electric shock.
- Do not hold or pull the product by the power cord or the signal cable.
 - A damaged cable can cause the product to malfunction, cause a fire, and poses a risk of electric shock.
- Do not use or keep flammable materials near the product.
- If the product emits an abnormal sound or a burnt smell or smokes, unplug the power-cord immediately and contact a Samsung service centre.

- If you smell gas, ventilate the room immediately. Do not touch the power plug of the product. Do not turn the product off or on.
- Do not strike or subject the product to a sudden shock. Do not pierce the product with a sharp object.

Cleaning Precautions

- Never use alcohol, solvents, waxes, benzene, thinners, air freshener, or lubricants to clean the product or spray insecticide on the product.
 - Using any of these materials can discolor the exterior coating or cause it to split or peel off, or remove the labelling on the product.
- To clean the product, unplug the power cord, and then wipe the product with a clean, dry, soft cloth (Microfiber, cotton).
 - Avoid leaving dust on the product. Dust can scratch its the surface.

Battery Usage Precautions

- Do not subject the product to high temperatures or fire. Do not bring the product into hot, poorly ventilated areas such as saunas or closed vehicles during the summer time.
 - There is a risk of fire or the battery could explode.
- Do not expose the product to high humidity.
 - Humidity and liquids can damage the components and electrical circuits of the product, cause the product to malfunction, and may cause a risk of fire. We recommended that you use the product in environments with temperatures between 5° ~ 35 °C and relative humidities between 10% ~ 75%.
- Do not leave the product connected to the AC adaptor after the battery has been fully charged.
 - Disconnect the AC adapter after the battery is fully charged to prevent damage to the battery. Overcharging can decrease the battery's useful life.
- Check the charge status of the battery once a month. If you do not use the product for long periods of time, recharge the battery periodically to maintain battery capacity and functionality.
 - Leaving the battery discharged for a long time can reduce its useful life, cause the battery to malfunction, or cause a risk of fire.



Contact SAMSUNG WORLD WIDE

If you have any questions or comments relating to Samsung products, please contact the SAMSUNG customer care centre.

Country	Contact Centre ☎	Web Site
▪ Asia Pacific		
AUSTRALIA	1300 362 603	www.samsung.com/au
NEW ZEALAND	0800 SAMSUNG (0800 726 786)	www.samsung.com/nz
CHINA	400-810-5858	www.samsung.com
HONG KONG	(852) 3698 4698	www.samsung.com/hk (Chinese) www.samsung.com/hk_en (English)
INDIA	1800 3000 8282 1800 266 8282	www.samsung.com/in
INDONESIA	0800-112-8888 (Toll Free) (021) 56997777	www.samsung.com/id
JAPAN	0120-327-527	www.samsung.com
MALAYSIA	1800-88-9999	www.samsung.com/my
PHILIPPINES	1-800-10-7267864 [PLDT] 1-800-8-7267864 [Globe landline and Mobile] 02-4222111 [Other landline]	www.samsung.com/ph
SINGAPORE	1800-SAMSUNG(726-7864)	www.samsung.com/sg
THAILAND	0-2689-3232, 1800-29-3232	www.samsung.com/th
TAIWAN	0800-32-9999	www.samsung.com/tw
VIETNAM	1800 588 889	www.samsung.com
▪ MENA		
U.A.E	800-SAMSUNG (726-7864)	www.samsung.com
OMAN	800-SAMSUNG(726-7864)	www.samsung.com/ae (English) www.samsung.com/ae_ar (Arabic)
KUWAIT	183-2255 (183-CALL)	
BAHRAIN	8000-4726	
QATAR	800-2255 (800-CALL)	
EGYPT	08000-726786	www.samsung.com
ALGERIA	0800 100 100	www.samsung.com/n_africa

Country	Contact Centre ☎	Web Site	
PAKISTAN	0800-Samsung (72678)	www.samsung.com/pk/	
TUNISIA	80-1000-12	www.samsung.com/n_africa	
JORDAN	0800-22273 06 5777444	www.samsung.com/Levant(English)	
SYRIA	18252273	www.samsung.com/Levant(English)	
IRAN	021-8255	www.samsung.com	
MOROCCO	080 100 2255	www.samsung.com	
SAUDI ARABIA	920021230	www.samsung.com/sa	
TURKEY	444 77 11	www.samsung.com	
▪ Africa			
NIGERIA	0800-726-7864	www.samsung.com/africa_en/	
GHANA	0800-10077 0302-200077		
COTE D'IVOIRE	8000 0077	www.samsung.com/africa_fr/	
SENEGAL	800-00-0077		
CAMEROON	7095- 0077		
KENYA	0800 545 545	www.samsung.com	
UGANDA	0800 300 300		
TANZANIA	0685 88 99 00		
RWANDA	9999		
BURUNDI	200		
DR Congo	499999		
SUDAN	1969		
SOUTH AFRICA	0860 SAMSUNG (726 7864)		www.samsung.com
BOTSWANA	8007260000		www.samsung.com
NAMIBIA	08 197 267 864		
ZAMBIA	0211 350370		
MOZAMBIQUE	847267864 / 827267864		



SAMSUNG

Wireless Audio Portable

מדריך למשתמש

תודה שרכשתם מוצר זה מתוצרת Samsung. מכתושרבש רישכמה תא ומשר
רתנו אלמ תוריש תלבקל רתאב,

www.samsung.com/register


DA-F60/DA-F61

שים לב שהמוצר יוצא מהמפעל כשהוא טעון לחלוטין, אך הסוללה הפנימית עלולה להתרוקן אם לא נעשה בה שימוש זמן רב. אם הסוללה התרוקנה לחלוטין, ייתכן שהמוצר לא יפעל באופן מיידי אפילו כשמתאם החשמל מחובר. במקרה כזה, יש לטעון למשך לפחות 20 דקות לפני השימוש. חמומלץ לטעון את המוצר באופן מלא, יש לטעון אותו למשך יותר משלוש שעות עד שמחווון הסוללה יהפוך לירוק (מספיק) או שגורית הלב תכבה (מלא).

תוכן עניינים

מה כולל המכשיר

בדקו אם האביזרים שלהלן מצורפים למכשיר. מראה האביזרים עשוי להיות שונה במקצת מהאיורים.

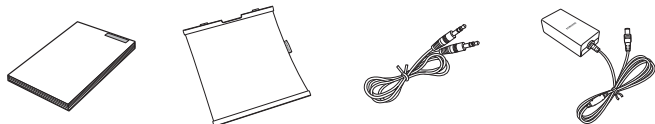


מדריך למשתמש

בד כיסוי

כבל שמע

שנאי חשמל

שימוש בבד הכיסוי

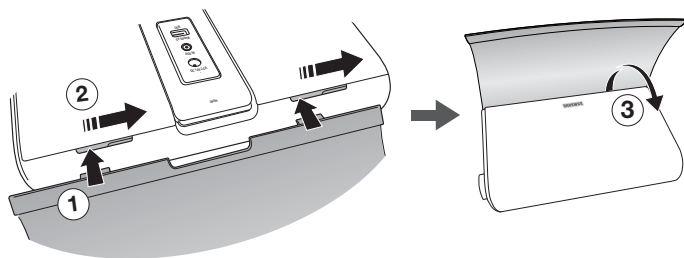

כרכו את הכיסוי סביב המכשיר. הכיסוי יישמר במקומו באמצעות מגנטים.

2 מה כולל המכשיר

3 מכשיר ה - Wireless Audio Portable שלכם

4 בדיקה וטעינה של הסוללה

5 השימוש בפונקציית NFC

6 שימוש בפונקציית Bluetooth

7 שימוש בכניסת AUX

7 השימוש בפונקציית SoundShare

8 מפרטים


8 שדרוג תוכנה

9 פתרון בעיות

10 הוראות בטיחות

10 אמצעי זהירות

מכשיר ה - WIRELESS AUDIO PORTABLE שלכם

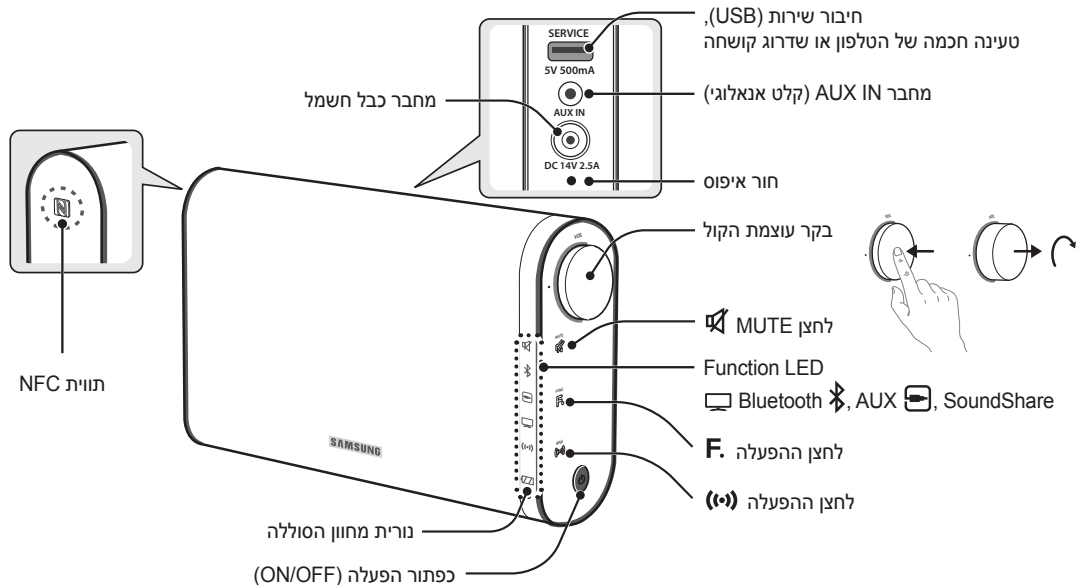

- בעת טעינת הטלפון הנייד החכם באמצעות USB, הסוללה עשויה להתרוקן מהר יותר.
- טעינת מכשירי טלפון חכמים דרך יציאת השירות (USB) אורכת יותר זמן מטעינת המכשיר דרך המתאם. ניתן להטענה רק כאשר מכשיר זה דולק.

בדיקה וטעינה של הסוללה

תוכלו להפעיל מכשיר זה למשך 12 שעות ברציפות מטעינה אחת. עבור טעינה מלאה, מומלץ להטעין את הסוללה למשך כ-3 שעות.


בדיקת הסוללה

מצב טעינת הסוללה בדרך כלל אינו פעיל לחסכון באנרגיית הסוללה. לבדיקת רמת הטעינה, לחצו על לחצן ההפעלה למשך 5 שניות.

[4Z]

ירוק 60% או יותר מטעינה מלאה
צהוב טעינה של 30%-60% מהטעינה המלאה
אדום 30% או פחות
הבהוב באדום יש לטעון

שנאי חשמל

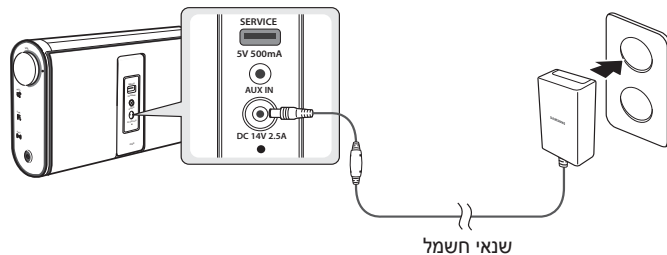

[4Z]

כבוי טעינה מלאה
ירוק טעינה של 60%-99% מהטעינה המלאה
צהוב טעינה של 30%-60% מהטעינה המלאה
אדום 30% או פחות

יש להטעין ולאחסן את הסוללה בין 5°-35° מעליות צלזיוס.

אין להטעין את הסוללה למשך יותר מ-12 שעות או להשאיר את הסוללה טעונה במלואה לזמן רב. דבר זה עלול לקצר את חיי הסוללה.


תלוי כיצד אתם משתמשים בנגן שלכם, אורך חיי הסוללה בפועל עשוי להשתנות ולהיות קצר יותר מהמפורט.

אם הסוללה אינה טעונה מספיק, לא ניתן להפעיל את המכשיר באמצעות לחיצה על לחצן ההפעלה/כיבוי. במקום זאת, נורית המחוון של הסוללה מהבהבת באדום מספר פעמים ונכבית.

בזמן שנורית המחוון של הסוללה מהבהבת, כל שאר הלחצן אינם פעילים.


אם הסוללה מתרוקנת לחלוטין, כל הגדרות הפונקציות, עוצמת הקול והבס מוחזרות להגדרות היצרן.

תומך

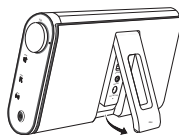

אל תמשכו את התומך חזק מידי. אתם עשויים לפגוע בו.

הפעילו מחדש את מכשירכם

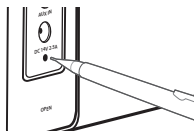

אם מתרחשת שגיאה בעת הפעלת המכשיר והוא אינו פועל כראוי, לחצו על חור האתחול עם קצה של עט או מוצר חד אחר למשך 2 שניות.

הפונקציה NFC מובנית בהתקני אנדרואיד הפועלים על Android OS 4.1 Jellybean או על גרסה מעודכנת יותר.

- אם ההתקן שלכם פועל על מערכת הפעלה של אנדרואיד מוקדמת יותר מ-Android OS 4.1 Jellybean, עליכם להוריד את היישום 'Samsung NFC Connection' משוק האנדרואיד כדי להשתמש בפונקציה NFC.

מיקום אנטנת ה-NFC שונה בטלפונים חכמים שונים. בדקו את מיקום האנטנה לפני החיבור.

אם הטלפון החכם שלך מכוסה במארז עבה, ייתכן שהחיבור לא יצליח.


הסימן N הוא סימן מסחרי או סימן מסחרי רשום של Inc. NFC Forum, בארה"ב ובארצות אחרות.

לא ניתן להגדיר תיוג של NFC עבור חיבור Bluetooth בזמן הפעלת המכשיר וכיבוי.

תיוג ה-NFC עבור חיבור ה-Bluetooth לא יפעל בזמן שנורית המחוון של הסוללה מהבהבת.

השימוש בפונקציית NFC

חבר את ההתקן התואם NFC שלך דרך Bluetooth ל-Wireless Audio Portable בעזרת תהליך ההגדרה הפשוט. ניתן לנגן מוסיקה בטלפון החכם דרך ה-Wireless Audio Portable.

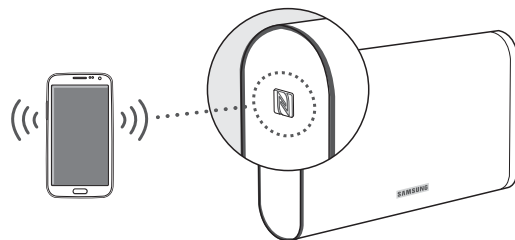

1. הפעל את פונקציית ה-NFC בטלפון החכם וודא שתכונת נעילת המסך של הטלפון כבויה. פונקציית ה-NFC של הטלפון החכם לא תפעל עם נעילת המסך פועלת.
2. גע בעדינות בסמל ה-NFC [N] בצד שמאל של ה-Wireless Audio Portable עם ההתקן התומך ב-NFC.
 - אם ה-Wireless Audio Portable כבוי, הוא יידלק באופן אוטומטי.
3. בטלפון החכם יוצג מסך קופץ עם שאלה האם להמשיך בחיבור ה-Bluetooth. בחרו **Yes (כן)**.
 - כאשר יושלם החיבור, תופיע ההודעה 'connected' (מחובר).
4. לניתוק התקן ה-NFC, געו שוב עם ההתקן בלוח השמאלי של ה-Wireless Audio Portable.
 - כדי לחבר התקן NFC נוסף כאשר הטלפון החכם הראשון עדיין מחובר, גע עם המכשיר הזה בצד השמאלי של ה-Wireless Audio Portable. ה-Wireless Audio Portable ינתק את הטלפון החכם הראשון ויתחבר לטלפון החכם השני.

שימוש בפונקציית Bluetooth

ותכולו לחבר את Wireless Audio Portable להתקן בלוטות' וליהנות מאיכות מוזיקה טראופונית משובחת, והכל באופן אלחוטי!




1. לחצו על הלחצן  על גבי ה-Wireless Audio Portable כדי לבחור את הפונקציה Bluetooth.
2. לחצו הכפתור  למשך שלוש שניות במצב בלוטות'.
3. סימן הבלוטות' מהבהב במהירות והמכשיר משתנה למצב סגור.
4. בצעו סריקה או חיפוש עבור ה-Wireless Audio Portable בהתקן ה-Bluetooth שלכם.
5. בחרו "[Samsung] W_Audio" ברשימת הפרטים שנמצאו על-ידי התקן ה-Bluetooth.
 - במידה והתקן הבלוטות' אינו מסתנרן עם Wireless Audio Portable, חזרו על פעולות מס' 1, 2, 3, 4.
6. הפעילו את המוזיקה בהתקן המחובר.

- התקן Bluetooth עשוי לגרום לרעשים או לתקלות, בהתאם לאופן השימוש, כאשר:
 - חלק מגופכם נמצא במגע עם המערכת המקבלת והמסדרת של התקן בלוטות' או Wireless Audio Portable.
 - השידורים מההתקן נחסמים על-ידי מכשולים כגון קיר, פינה או מחיצות משרדיות.
 - שידורי ההתקן משובשים על-ידי הפרעות חשמליות מהתקנים המשרדים באותו טווח תדרים, כגון מכשירים רפואיים, מיקרואלים ומתאם LAN אלחוטי.
- ככל שהמרחק בין Wireless Audio Portable והתקן הבלוטות' רב יותר, האיכות תהייה פחות טובה.
- חיבור ה-Bluetooth פועל כהלכה רק כאשר הוא נמצא בקרבת המערכת. החיבור יתנתק באופן אוטומטי כאשר ההתקן יוצב מחוץ לטווח הפעולה. גם בתוך טווח הפעולה, ייתכן שאיכות הקול תיפגע בשל מכשולים כגון קירות או דלתות.
- במצב חיבור Bluetooth, חיבור ה-Bluetooth יתנתק כאשר המרחק בין Wireless Audio Portable להתקן ה-Bluetooth יעלה על 5 מטר.
- התקן אלחוטי זה עשוי לגרום לפרעות חשמליות במהלך הפעלתו.
- ייתכן שתדרשו להזין סיסמה בחיבור התקן הבלוטות' למכשיר Wireless Audio Portable. אם יופיע חלון הזנת קוד PIN, הזינו את הסיסמה <0000>.
- קצבי דיגיטה נתמכים עבור עננות aptX ו-SBC הם 44.1kHz ו-48kHz.
- מאפיין ה-AVRCP אינו נתמך. לא ניתן לחבר התקן Bluetooth התומך בפונקציית HF (Hands Free) בלבד.
- יש לחבר התקן Bluetooth התומך בפונקציית A2DP (AV) בלבד.
- ניתן לצמד התקן Bluetooth אחד בלבד בכל פעם.
- בעת הפעלת מצב ה-Bluetooth או הפעלת המכשיר במצב Bluetooth, חיבור ה-Bluetooth יישמר באופן אוטומטי, אם הוגדר. ניסיון חיבור ה-Bluetooth האוטומטי ייפסק לאחר דקה.
- בזמן ניסיון החיבור האוטומטי, חיבור להתקן Bluetooth אחר עשוי להיות מוגבל. לצורך חיבור התקן Bluetooth אחר, העבירו את מצב ה-Bluetooth של המכשיר למצב צימוד.

שימוש בפונקציית SOUNDSHARE


חבר את ה-Wireless Audio Portable של Samsung לטלוויזיה של Samsung תואמת Bluetooth כדי ליהנות מצלילי הטלוויזיה באופן אלחוטי.

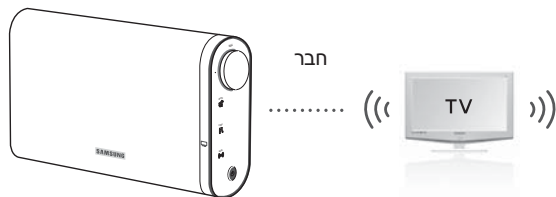

1. הפעילו את מכשירי טלוויזיות Samsung ואת מכשיר Wireless Audio Portable.
 - הגדירו "Add New Device" למצב "ON" בתפריט "SoundShare Settings" (לפרטים נוספים, עיינו בהוראות ההפעלה של הטלוויזיה).
 2. לחצו על הלחצן כדי לשנות את מצב ה-Wireless Audio Portable ל- . תופיע הודעה השואלת אם להמשיך עם התאמת ה-Bluetooth.
 - לחצן מהבהב במצב כוננות.
 3. בחרו **Yes (כן)** < במסך הטלוויזיה. ה-Wireless Audio Portable יותאם לטלוויזיה.
 - המחווין ייהבה, ולאחר מכן יפסיק להבהב.
 - סנכרון מכשיר Wireless Audio Portable להתקן בלוטות' הושלם.
 - אם ברצונכם לבטל התאמה קיימת ולהתאים את ה-Wireless Audio Portable לטלוויזיה אחרת, לחצו על הלחצן במשך 3 שניות כאשר המכשיר במצב .
- SoundShare נתמכת על-ידי טלוויזיות Samsung מסוימות ששוחררו אחרי 2012. בדקו אם הטלוויזיה שלכם תומכת ב-SoundShare לפני שתתחילו. (למידע נוסף, עיין במדריך למשתמש של הטלוויזיה.)
- מרחק ההתאמה האופטימלי הוא 1 מטר או פחות.


שימוש בכניסת AUX

כדי ליהנות ממוסיקה מהתקן שמע חיצוני שאינו תומך בתקשורת Bluetooth, השתמש בכניסת AUX של המוצר.

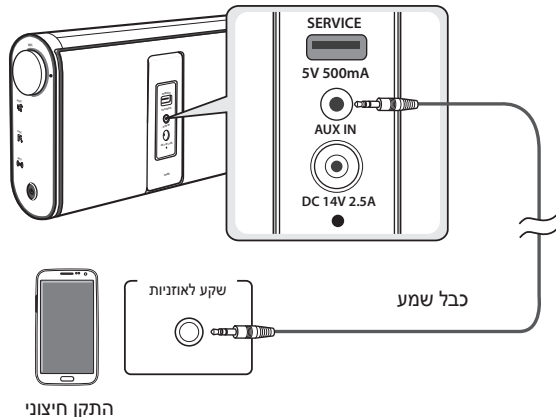

1. חבר את כבל השמע לכניסת AUX.
2. לחצו על הכפתור לבחירת פונקציית AUX. לפני העברה או התקנה של המכשיר, הקפידו לכבות אותו ולנתק אותו מהחשמל.

שדרוג תוכנה

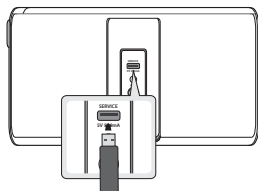

Samsung עשויה להציע שדרוגים למערכת הקושחה של Samsung Wireless Audio Portable בעתיד.

כדי לשדרג את הקושחה, בקר באתר samsung.com ומצא את הדגם שלך לפי שם כדי למצוא קובץ הורדה מתאים.

הורד את קובץ הקושחה אל כונן USB ועקוב אחר ההוראות למטה כדי לשדרג את המוצר.

1. הפעילו את המוצר.

2. הכניסו כונן USB המכיל את שדרוג הקושחה ליציאת השירות (USB) בחלקו האחורי של המכשיר.

3. לחצו על הלחצנים  ו-  בו זמנית במשך 5 שניות. תהליך העדכון יתחיל.

• כל מחוון ה-LED יבהבו במהלך תהליך העדכון.

4. נורות ה-LED ייכבו באופן אוטומטי לאחר השלמת תהליך העדכון.

• אין לנתק את החשמל או להסיר את כונן ה-USB בעת השדרוג.

• המכשיר ייכבה באופן אוטומטי לאחר השלמת שדרוג הקושחה.

• עם השלמת שדרוג הקושחה, ההגדרות שביצעתם יחזרו להגדרות ברירת המחדל של היצרן. מומלץ לרשום את ההגדרות שלכם כך שתוכלו להחזיר אותן בקלות לאחר השדרוג.

• כאשר נורית מחוון ה-LED של הסוללה דולקת באדום, אין לעדכן את המכשיר. עדכון עלול לגרום לתקלה במכשיר.

🔗 אם שדרוג הקושחה נכשל, מומלץ לפרמט את כונן ה-USB ב-FAT16 ולנסות שוב.

🔗 למטרות שדרוג, אין לפרמט את כונן ה-USB בקבצים מסוג NTFS, מכיוון שלא מדובר במערכת קבצים נתמכת.

🔗 ייתכן שהתקן ה-USB אינו נתמך, בהתאם ליצרן.

שם דגם	DA-F60/DA-F61
משקל	1.1 ק"ג
מידות (רוחב x עומק x גובה)	131 × 46.5 × 225 מ"מ
טווח הטמפרטורה בפעולה	+5°C ~ +35°C
טווח אחוזי הלחות בפעולה	10% עד 75%

- Samsung Electronics Co., Ltd שומרת את הזכות לשנות את המפרטים ללא התרעה.
- המשקל והמידות המצוינים הם משוערים.
- לקבלת מידע אודות אספקה וצריכת חשמל, עיינו בתווית המודבקת על-גבי המכשיר. פתח את המכסה האחורי כדי לבדוק את התווית.

🔗 aptX® : מאפשר שמע סטריאו דרך Bluetooth שמספק איכות שמע קווית באופן אלחוטי.

פתרון בעיות

בטרם תפנו לקבלת שירות, נסו את הפתרונות הבאים:

המכשיר אינו נדלק.

- חברו את כבל החשמל לשקע.
- מכשירכם לא יפעל אם הסוללה התרוקנה לגמרי. הטעינו את הסוללה והפעילו שוב את הגגן.
- בדקו האם הסוללה התרוקנה.

פונקציה מסוימת אינה פועלת בעת לחיצה על הלחצן.

- נתקו את כבל החשמל וחברו אותו שוב.
- בדקו האם הלחצנים תואמים לפונקציות שאותם אתם רוצים להפעיל.

לא נשמעים צלילים.

- בדקו שהיחידה מחוברת כראוי.
- בדקו האם לחצן "השתק" מופעל.
- בדקו האם עוצמת השמע מכוונת לעצמה הנמוכה ביותר.

המכשיר כבוי.

- המכשיר נכבה באופן אוטומטי במקרים הבאים.
 - אם לא מתקבל קלט KEY במשך 8 שעות בזמן שהכבל מחובר במצב AUX.
 - אם כבל AUX במצב AUX מנותק למשך 25 דקות.
 - אם מצב ה-Bluetooth או ה-SoundShare נותק מהמכשיר למשך 25 דקות.
 - המכשיר אינו כבה כאשר הטלפון החכם נטען.

אין הפקת קול במצב AUX.

- בדקו האם ההתקן החיצוני מקבל חשמל והאם המוזיקה מתנגנת.
- וודאו כי נבחר מצב AUX.
- בדקו האם כבל השמע מחובר כראוי.
- הגבירו את עוצמת השמע של המכשיר או ההתקן החיצוני.

פעולת SoundShare (צימוד הטלוויזיה) נכשלה.

- בדקו אם הטלוויזיה שלכם תומכת ב-SoundShare.
(<http://www.samsung.com>)
- בדקו אם לטלוויזיה שלכם יש את הקושחה המעודכנת ביותר.
- אפסו את המכשיר.
- אם הפונקציה אינה פועלת למרות שהחיבור הושלם, פנו למרכז השירות של Samsung.

מכשיר ה- Wireless Audio Portable לא יבצע סריקה או יתחבר כראוי במקרים

הבאים:

- במידה וקיים שדה מגנטי חזק בסביבת Wireless Audio Portable.
- במידה ומספר התקני בלוטות' מחוברים בו-זמנית ל- Wireless Audio Portable.
- אם התקן ה-Bluetooth כבוי, אינו נמצא במקומו או שיש בו תקלה.

אמצעי זehירות לאספקת חשמל

- אין להעמיס יותר מדי על שקעים או על כבלים מאריכים.
 - הדבר עלול לגרום להתחממות חריגה או לאש.
- אין לחבר או לנתק את כבל החשמל עם ידיים רטובות.
- אין לחבר או לנתק את כבל החשמל עם ידיים רטובות.
- לניקיון פני תקע החשמל, הסירו את התקע מהשקע בקיר ונקו את הפנים עם מטלית יבשה בלבד.
- אין לכופף את כבל החשמל או למשוך אותו בכוח.
- אין להניח חפצים כבדים על מתאם המתח AC.
- אין להשתמש במתאם AC אם הוא פגום. אין לנתק את המתאם AC על-ידי משיכת כבל החשמל שלו.
- אין לחבר את כבל החשמל לשקע רופף או פגום.
- הכניסו את תקע מתאם ה-AC במלואו לשקע בקיר כך שהתקע שלו יהיה מחובר היטב לשקע.
 - אם החיבור רופף, קיימת סכנת שריפה.

אמצעי זehירות בעת ההתקנה

- אין לחבר את המכשיר בקרבת ציוד או חפצים היוצרים חום או אש (נרות, קטורת נגד יתושים, תנורים, רדיאטורים וכו'). אין לחבר את המכשיר תחת שמש ישירה.
- בעת הזזת המכשיר, כבו את החשמל ונתקו את כל הכבלים (כולל כבל החשמל) מהמכשיר.
 - כבל פגום עשוי לגרום לשריפה ומהווה סיכון להתחשמלות.
- התקנת המכשיר בסביבה עם חום גבוה או לחות, או בסביבה עם קור קיצוני, עשויה לגרום לבעיות באיכות או לתפקוד לקוי של המכשיר. לפני התקנת המכשיר בסביבה בסביבה לא רגילה, צרו קשר עם מרכז השירות של Samsung לקבלת מידע נוסף.
- הניחו את המכשיר במצב אנכי בעת ההתקנה על מדף, ארון או שולחן. אין למקם את המכשיר על משטח בלתי יציב (לדוגמה, מדף רופף, שולחן נטוי וכו').
- השמטת המכשיר יכולה לגרום לתפקוד לקוי ומהווה סיכון לפציעה. רטט חזק או פגיעה עשויים גם הם לגרום לתפקוד לקוי של המכשיר ולסכנת שריפה.
- התקינו את המכשיר עם מספיק מקום מסביב בשביל האוורור.
 - השאירו לפחות 10 ס"מ בחלקו האחורי של המכשיר ויותר מ-5 ס"מ בכל צד של המכשיר.
 - שמרו את חומרי האריזה מוחץ להישג ידם של ילדים.
 - ילדים המשחקים עם חומרי הפלסטיק מסתכנים בהיחנקות.

זehירות

סכנת התחשמלות הפתיה אסורה

לצמצום הסיכון להתחשמלות, אין להוריד את המכסה (או הדופן האחורית). המכשיר אינו כולל חלקים שניתנים לתיקון על-ידי המשתמש. לתיקון ושירות, פנו לטכנאי שירות מוסמך.

סמל זה מציינ "מתח מסוכן" שקיים בתוך המכשיר ועלול לגרום להתחשמלות או לפציעה.



סמל זה מציינ הוראות חשובות הנלוות למכשיר.



אזהרה : לצמצום הסיכון לשריפה או להתחשמלות, אין לחשוף מכשיר זה לגשם או ללחות.

זehירות : למניעת התחשמלות, יש להתאים את הקצה הרחב של התקע אל השקע הרחב ולהכניס עד הסוף.

- יש לוודא כי מכשיר זה מחובר תמיד לשקע זרם חליפין עם הגנת חיבור הארקה.
- כדי לנתק את המכשיר מהחשמל, יש לשלוף את התקע משקע החשמל, לכן על שקע החשמל להיות זמין לשימוש בכל עת.

זehירות

- אין לחשוף את המכשיר לטפטוף או להתזה של נוזלים. אין להניח על המכשיר כלים מלאים בנוזלים, כגון אגרסלים.
- לכיבוי מוחלט של המכשיר, עליכם להוציא את התקע שלו משקע החשמל. לכן, על התקע להיות זמין ונגיש בכל זמן.

אמצעי זהירות בעת השימוש

- שימוש במכשיר למשך זמן ממושך בעוצמה גבוהה עשויה לגרום לנזק חומר לשימיעה.
- אם אתם חשופים לצליל הגבוה מ-85db למשך זמן ממושך, אתם עשויים לפגוע בשימיעה שלכם. ככל שהצליל גבוה יותר, כך הנזק לשימיעה עשוי להיות משמעותי יותר. שימו לב שעוצמת הקול של שיחה רגילה היא בין 50 ל-60 דציבלים, ואילו עוצמת רעש הכביש היא כ-80 דציבלים.
- מכשיר זה הוא בעל מתח גבוה מסוכן. אין לנסות לפרק, לתקן או לשנות אותו בעצמכם.
- צרו קשר עם מרכז שירות של Samsung במקרה ויש צורך בתיקון המכשיר.
- אין להניח מכל עם נוזלים על המכשיר (לדוגמה, אגרטל, משקאות, מוצרי קוסמטיקה או כימיקלים). אין לאפשר לחפצי מתכת (לדוגמה, מטבעות, סיכות שיער וכו') או לחומרים דליקים (לדוגמה, נייר, גפרורים וכו') להיכנס לתוך המכשיר (דרך פתחי האוורור, כניסות קלט/פלט וכו').
- אם חומרים מזיקים או נוזלים נכנסים לתוך המכשיר, כבו מיד את המכשיר, נתקו את כבל החשמל ולאחר מכן צרו קשר עם מרכז שירות של Samsung.
- אין להפיל את המכשיר. במקרה של תקלה מכאנית, נתקו את כבל החשמל וצרו קשר עם מרכז שירות של Samsung.
- קיים סיכון לשריפה או להתחשמלות.
- אין להחזיק או למשוך את המכשיר דרך כבל החשמל או כבל האות.
- כבל פגום עשוי לגרום לתפקוד לקוי של המכשיר, לגרום לשריפה ומהווה סיכון להתחשמלות.
- אין להשתמש או למקם חומרים דליקים בקרבת המכשיר.
- אם המכשיר פולט צליל חריג או ריח שרוף, נתקו מייד את כבל החשמל וצרו קשר עם מרכז שירות של Samsung.
- אם אתם מריחים ריח של גז, אוררו מייד את החדר. אין לגעת בכבל החשמל של המכשיר. אין להדליק או לכבות את המכשיר.
- אין להכות או לחשוף את המכשיר לזעזוע פתאומי. אין לנקב את המכשיר עם חפץ חד.

אמצעי זהירות בעת הניקי

- אין להשתמש בכוח, חומרים ממיסים, שעווה, בנזן, מדללים, מטהרי אוויר או בחומרי סיכה לניקוי המכשיר ואין לרסס קוטל חרקים על המכשיר.
- השימוש באחד מחומרים אלה עשוי לשנות את צבע הציפוי החיצוני, לגרום לקילופו או להסרת תווית המכשיר.
- לניקי המכשיר, נתקו את כבל החשמל ולאחר מכן נקו את המכשיר עם מטלית רכה יבשה ונקייה (מכותנה או מסיבים דקים).
- הימנעו מהשארת אבק על המכשיר. אבק עשוי לשרוט את המכשיר.

אמצעי זהירות בעת השימוש בסוללות

- אין לחשוף את המכשיר לטמפרטורות גבוהות או לאש. אין להביא את המכשיר לאזורים חמים ונטולי אוורור כגון סאונות או רכבים סגורים בתקופת הקיץ.
- קיים סיכון לשריפה או להתפוצצות הסוללה.
- אין לחשוף את המוצר ללחות גבוהה.
- לחות ונוזלים יכולים לגרום נזק לרכיבים ולמעגלים החשמליים של המכשיר, לגרום לתפקוד לקוי של המכשיר ואף לשריפה. מומלץ להשתמש במכשיר באזורים עם טמפרטורה בין $5^{\circ}\text{C} \sim 35^{\circ}\text{C}$ ולחות יחסית בין 75% ~ 10%.
- אין להשאיר את המכשיר מחובר למתאם AC לאחר שהסוללה נטענה במלואה.
- נתקו את מתאם ה-AC לאחר שהסוללה נטענה במלואה כדי למנוע נזק לסוללה. טעינת יתר עשויה לקצר את אורך חיי הסוללה.
- בדקו את סטטוס הטעינה של הסוללה פעם בחודש. אם אינכם משתמשים במכשיר למשך תקופות זמן ארוכות, טענו מחדש את הסוללה מעת לעת כדי לשמור על היכולות והפונקציונאליות של הסוללה.
- השארת סוללה ריקה לתקופת זמן ממושכת עשויה לקצר את אורך החיים של הסוללה, לגרום לתפקוד לקוי או להוות סכנת שריפה.



יצירת קשר עם SAMSUNG WORLD WIDE

אם יש לכם שאלות או הערות הנוגעות למוצרי Samsung, צרו קשר עם מרכז שירות הלקוחות של SAMSUNG.

אתר אינטרנט	מרכז מידע ☎	אזור	
www.samsung.com/pk/	0800-Samsung (72678)	PAKISTAN	
www.samsung.com/in_africa	80-1000-12	TUNISIA	
www.samsung.com/Levant(English)	0800-22273 06 5777444	JORDAN	
www.samsung.com/Levant(English)	18252273	SYRIA	
www.samsung.com	021-8255	IRAN	
www.samsung.com	080 100 2255	MOROCCO	
www.samsung.com/sa	920021230	SAUDI ARABIA	
www.samsung.com	444 77 11	TURKEY	
Africa ■			
	0800-726-7864	NIGERIA	
www.samsung.com/africa_en/	0800-10077	GHANA	
	0302-200077		
www.samsung.com/africa_fr/	8000 0077	COTE D'IVOIRE	
	800-00-0077	SENEGAL	
	7095- 0077	CAMEROON	
	0800 545 545	KENYA	
www.samsung.com	0800 300 300	UGANDA	
	0685 88 99 00	TANZANIA	
	9999	RWANDA	
	200	BURUNDI	
	499999	DRC	
	1969	SUDAN	
	www.samsung.com	0860 SAMSUNG (726 7864)	SOUTH AFRICA
		8007260000	BOTSWANA
www.samsung.com	08 197 267 864	NAMIBIA	
	0211 350370	ZAMBIA	
	847267864 / 827267864	MOZAMBIQUE	

אתר אינטרנט	מרכז מידע ☎	אזור
Asia Pacific ■		
www.samsung.com/au/	1300 362 603	AUSTRALIA
www.samsung.com/nz	0800 SAMSUNG (0800 726 786)	NEW ZEALAND
www.samsung.com	400-810-5858	CHINA
www.samsung.com/hk (Chinese)	(852) 3698 4698	HONG KONG
www.samsung.com/hk_en (English)	1800 3000 8282 1800 266 8282	INDIA
www.samsung.com/in	0800-112-8888 (Toll Free) (021) 56997777	INDONESIA
www.samsung.com	0120-327-527	JAPAN
www.samsung.com/my	1800-88-9999	MALAYSIA
www.samsung.com/ph	1-800-10-7267864 [PLDT] 1-800-8-7267864 [Globe landline and Mobile]	PHILIPPINES
	02-4222111 [Other landline]	
www.samsung.com/sg	1800-SAMSUNG(726-7864)	SINGAPORE
www.samsung.com/th	0-2689-3232	THAILAND
	1800-29-3232	
www.samsung.com/tw	0800-32-9999	TAIWAN
www.samsung.com	1800 588 889	VIETNAM
■ MENA		
www.samsung.com	800-SAMSUNG (726-7864)	U.A.E
	800-SAMSUNG(726-7864)	OMAN
www.samsung.com/ae (English)	183-2255 (183-CALL)	KUWAIT
www.samsung.com/ae_ar (Arabic)	8000-4726	BAHRAIN
	800-2255 (800-CALL)	QATAR
www.samsung.com	08000-726786	EGYPT
www.samsung.com/in_africa	0800 100 100	ALGERIA



AH68-02668R-00